

The mini-pool must be installed by personnel qualified in both electrical and hydraulic connections.

Before making the connections, the installer must verify that the electrical system is protected by an earthing system that complies with differential switch (0.03) regulations in force in the county of use.


The mini-pool must be connected to the electrical system in a fixed manner by means of a switch suitable for the power (kW) of the product to be connected and located outside zones 0, 1, 2 and 3.

The installer must use suitably sectioned cables that must not be inferior to type H 05 VV-F.

**WARNING:** if the conditions indicated are not observed, the safety of the mini-pool may be compromised: in this case, the product guarantee and the manufacturer's responsibility for any direct or indirect damage caused by the product shall be void.

When the guarantee is voided, for the above-mentioned reason, only parts recognised as being defective will be replaced and costs relating to the labour necessary for product removal will not be covered.

The overall dimension values are expressed in centimetres.  
The actual dimensions may vary by +/- 0.5cm

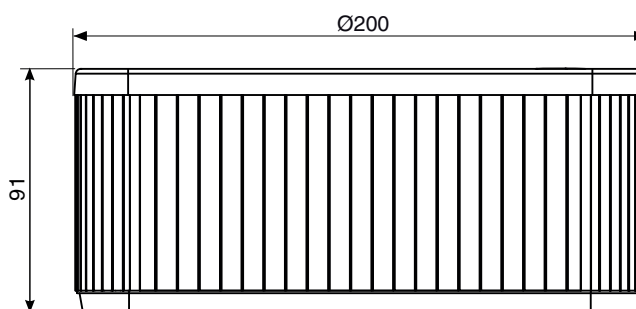

BOULEVAR 200	
<b>DIMENSIONS cm</b>	Ø200 - H.91
<b>SEATS</b>	4 PERSONE
<b>SEATS</b>	1 PERSONA
<b>LT</b>	830
<b>PESO A VUOTO KG</b>	280
<b>JETS</b>	12
<b>PUMP</b>	1x2 VELOCITA' 1200 Watt
<b>HEATER</b>	2000 Watt
<b>TOTAL CONSUMPTION KW</b>	3200 Watt

CONNECTION	FUSIBILI	HZ	Volt
MONOFASE	1x25A 1x16A	50 HZ 50 HZ	230 V 1N ~ 230 V 1N ~

### ENCASEMENT SET-UP

Create a concrete compartment to accommodate the mini-pool, in accordance with the measurements shown in the drawing, making sure that it is perfectly level. Set up a compartment of at least 60 cm around the perimeter of the mini-pool to ensure accessibility to the hydraulic and electrical system. Create a collection and draining system at the bottom of the compartment.

It must also be possible to move the mini-pool at any time without having to damage the walls.



Provide aeration of a suitable measurement.

### VENTILATION

In the event of installation in a closed space, provide adequate ventilation of the environment itself.

### LOAD SET-UP

It is advisable to use a flexible, external hose to fill the mini-pool, taking care not to immerse it to avoid any reflux of water into the water supply.

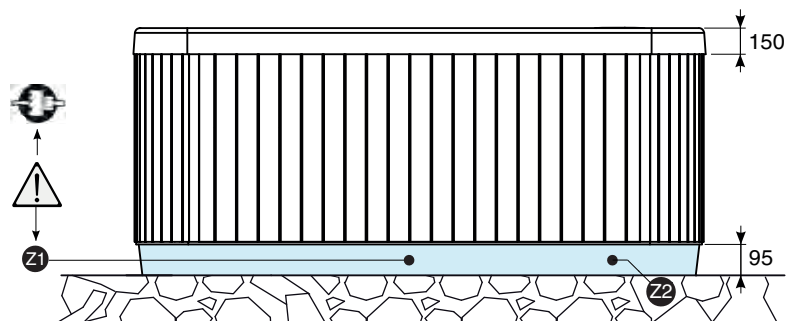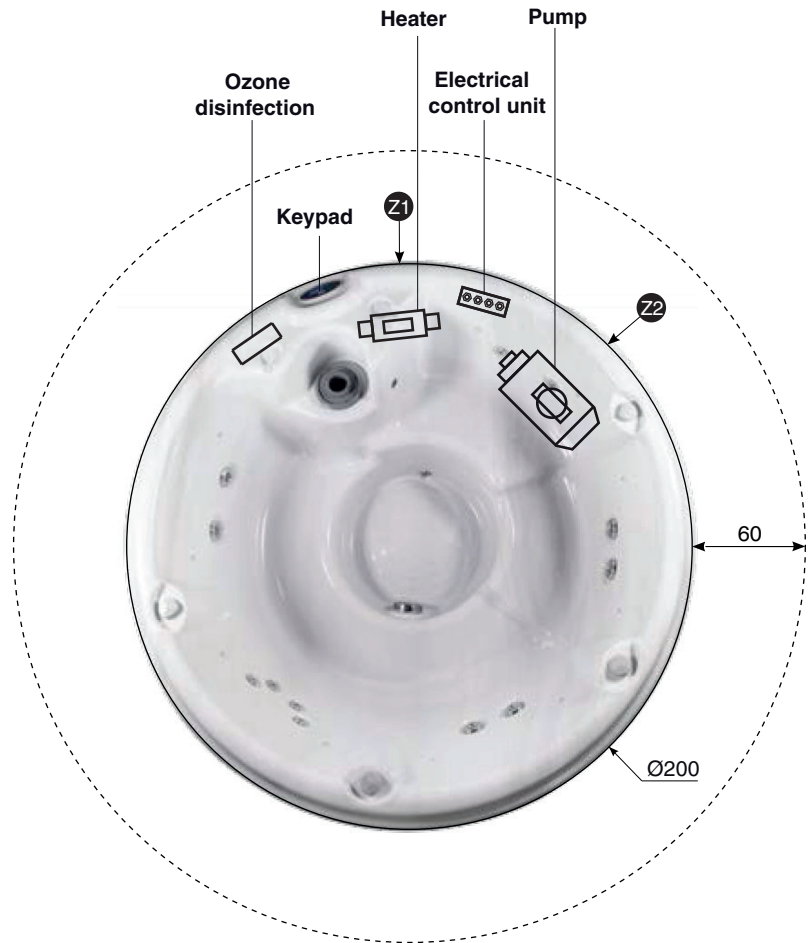

**Z1 = Electrical access point**

make a hole (with dimensions suitable for passing the power cable through it) in one of the 4 sides of area Z1.

**Z2 = Drain 3/4"**