FOR ALL

180x78/83xH59


The tub must be installed by personnel qualified in both electrical and hydraulic connections.


Before making the connections, the installer must verify that the electrical system is protected by a differential switch (0.03 A) and that the earthing system complies with regulations in force in the county of use.

The whirlpool tub must be connected to the electrical system in a fixed manner (with a 3-pole H05 -3x2.5 mm² cable with a cross-section of 2.5 mm²) using a bipolar switch (minimum contact opening 3 mm) suitable for the power (kW) of the product to be connected and located outside zones 0, 1, 2 and 3 and away from any possible water sprays.

Technical data sheet



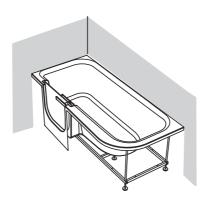

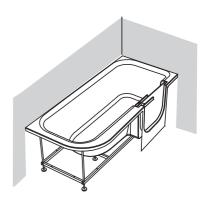

LH tub

RH tub

S	SYSTEMS		Electrical characteristics				Nozzles		Water Cont.		Dimensions			Package dimensions			Weight	
		Volts	Α	Kw	Hz	Whirl	Air	use	max	length	width	height	length	width	height	net	gross	
Di	gital whirl.	230	4,5	0,95	50	8	_	210	330	180	75/80	61	187	87	78	60	76	
Ai	rpool	230	3	0,7	50	_	16	210	330	180	75/80	61	187	87	78	59	75	
Ai	rpool Whirl.	230	7,5	1,7	50	8	12	210	330	180	75/80	61	187	87	78	69	85	
Τι	ub with frame	_	_	_		_	_	210	330	180	75/80	61	187	87	78	51.5	67.5	

The data must be considered without panels and accessories

The overall dimension values are expressed in centimetres. The actual dimensions may vary by \pm 1 cm.


The product must also be connected to the building's equipotential system using the terminal located on the external frame.


If installing the tub encased between walls, the warranty will be valid only if adequate inspection grilles and ventilation are provided in the walls themselves.

It must also be possible to move the tub at any time without having to damage the walls.

WARNING: in the event of non-compliance, even only partial, with the aforementioned conditions, the safety of the tub may be compromised: the warranty and the manufacturer's responsibility for any direct or indirect damage caused by the product will therefore cease to be effective.

In the case of a voided warranty, mentioned above, only single pieces deemed defective will be replaced. Any labour costs incurred for removal of the product will not be covered.

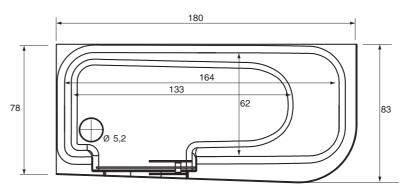

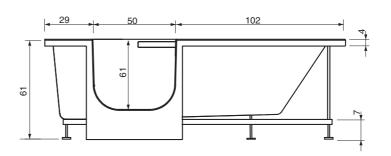

FOR ALL 180x78/83

KEY

A - 1/2" cold water connection.

A1 - Wall tap connection.

B - 1/2" hot water connection.

C - H05 3x2.5 mm power cable outlet (min. length 2 [m])

D - Equipotential cable outlet.

E - Drain at floor level Ø 40.

NOTES:

For tubs with frame, do not provide a power cable.


In all cases, always prepare the cable for the equipotential.

For tub rim taps included in our catalogue, use connections A and B only.


If a wall tap (A1) is envisaged, consider the measurements indicated in the drawing as its centre. The outlet supplying the water load in the tub must be at least 5 cm higher than the rim.

Electrical and plumbing provisions


Tub installation in the left-hand corner For installation in the right-hand corner, the connections are mirror images.

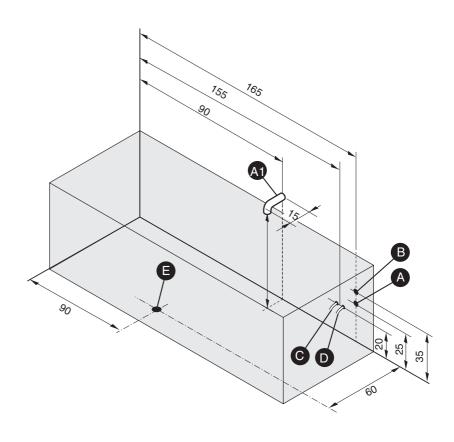

POSITIONING THE ON/OFF AND TAP CONTROLS

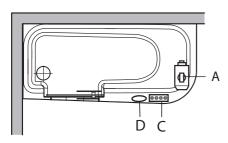

Digital whirl.

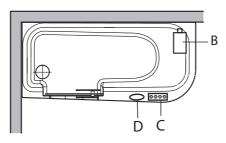

Airpool

A = Motor


B = Blower

C = Electrical control unit


D = Keypad

The position of A, B and C may vary in tubs with accessories.

While it is as per the drawing whether the tub is placed on the left or on the right.

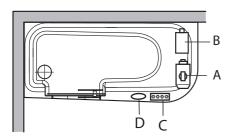

Whirlpool airpool

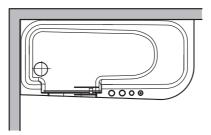

Taps