

**MINI-POOL  
SUN PLUS  
213x160x H.75**

technical  
data sheet



The mini-pool must be installed by personnel qualified in both electrical and hydraulic connections.


Before making the connections, the installer must verify that the electrical system is protected by an earthing system that complies with differential switch (0.03) regulations in force in the county of use.

The mini-pool must be connected to the electrical system in a fixed manner by means of a switch suitable for the power (kW) of the product to be connected and located outside zones 0, 1, 2 and 3.

The installer must use suitably sectioned cables that must not be inferior to type H 05 VV-F.

**WARNING:** if the conditions indicated are not observed, the safety of the mini-pool may be compromised: in this case, the product guarantee and the manufacturer's responsibility for any direct or indirect damage caused by the product shall be void.

When the guarantee is voided, for the above-mentioned reason, only parts recognised as being defective will be replaced and costs relating to the labour necessary for product removal will not be covered.

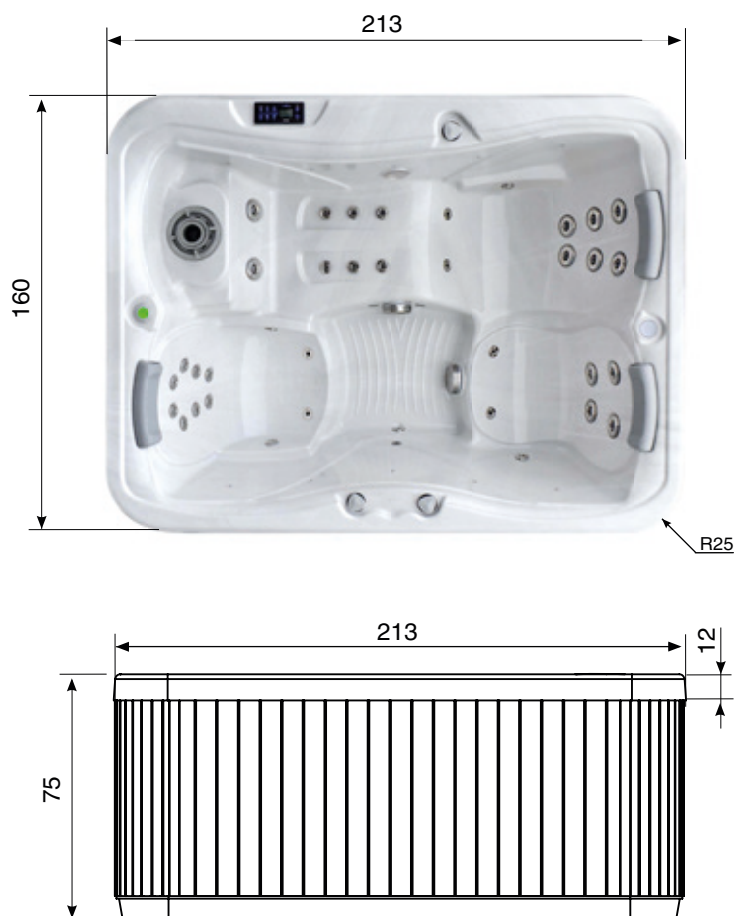

MINI-POOL	SUN PLUS
<b>DIMENSIONS cm</b>	213X160X75
<b>SEATS</b>	2 PERSONE
<b>RECLINED SEAT</b>	1 PERSONA
<b>LT</b>	660
<b>EMPTY WEIGHT KG</b>	290
<b>JETS</b>	42
<b>PUMPS</b>	2 X 1 VELOCITA' 1500Watt
<b>BLOWER</b>	300 Watt
<b>HEATER</b>	3000 Watt
<b>TOTAL CONSUMPTION KW</b>	6300 Watt *

**SUN PLUS**

CONNECTION	FUSES	HZ	Volt	total kW consumption
SINGLE PHASE	1X32 A	50 HZ	230 V 1N ~	6300 Watt *
THREE PHASE	3X16 A	50 HZ	400 V 3N ~	6300 Watt *

\* With active heater

The overall dimension values are expressed in centimetres.  
The actual dimensions may vary by + - 0.5cm

**MINI-POOL  
SUN PLUS  
213x160x H.75**

technical  
data sheet



**ENCASEMENT SET-UP**

Create a concrete compartment to accommodate the mini-pool, in accordance with the measurements shown in the drawing, making sure that it is perfectly level. Set up a compartment of at least 60 cm around the perimeter of the mini-pool to ensure accessibility to the hydraulic and electrical system.

Create a collection and raining system at the bottom of the compartment.

It must also be possible to move the mini-pool at any time without having to damage the walls.


Provide aeration of a suitable measurement.

**VENTILATION**


In the event of installation in a closed space, provide adequate ventilation of the environment itself.

**LOAD SET-UP**

It is advisable to use a flexible, external hose to fill the mini-pool, taking care not to immerse it to avoid any reflux of water into the water supply.

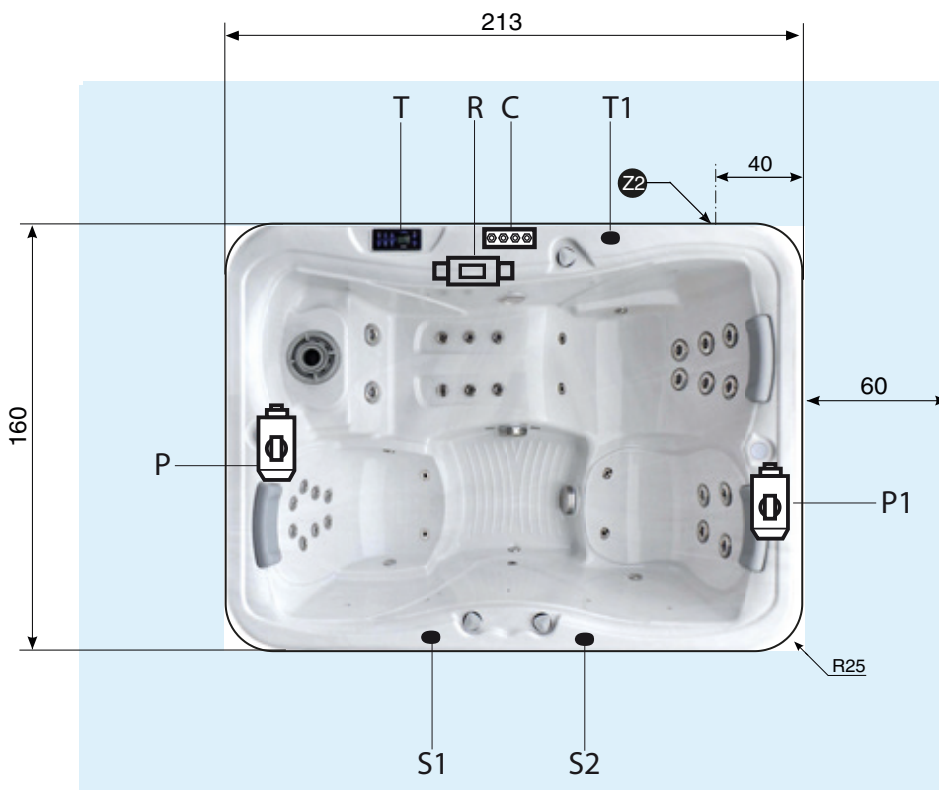

- P - P1 = PUMP
- R = HEATER
- C = ELECTRICAL CONTROL UNIT
- T = KEYPAD
- T1 = KEYPAD HI-FI
- S1 - S2 = SPEAKERS

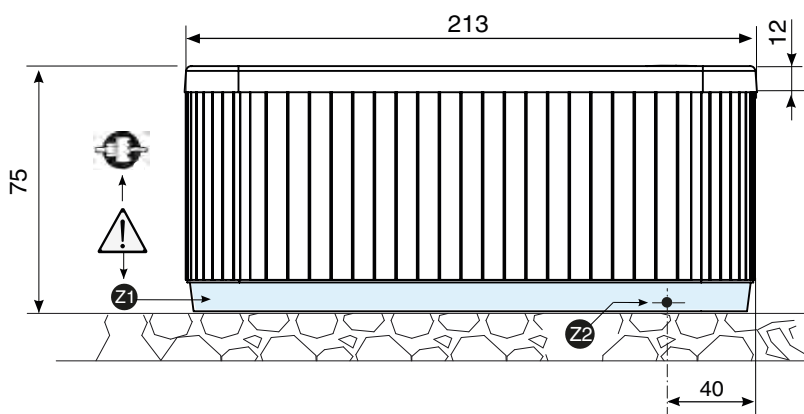

- Z1 = Electrical access point**  
make a hole (with dimensions suitable for passing the power cable through it) in one of the 4 sides of area Z1.
- Z2 = Drain 3/4"**