TEMPO

90 x 100 h 211

LT VERSION

Data sheet

VERSION IN LEFT CORNER

VERSION IN LEFT CORNER

0

0

0

Aversion to WALL

WITH CENTRAL DOOR LEFT

0

Aversion to WALL

With side door LINKS



VERSION right corner




VERSION right corner



Aversion to WALL With side door RIGHT




Aversion to WALL WITH CENTRAL DOOR RIGHT

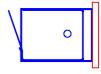


The minimum height of the wall tiles without protrusions is equal to the height of the stall. On the walls there cannot be any greca or quarter round decorative patterns.

	Electrical characteristics				Caratteristiche idrauliche					Overall dimensions				
SYSTEMS	Volt	Volt A Kw Hz		max	working	water	connections		stall package dimensions			weight		
						pressure	jets	H/C water	discharge	length	width	height	net	gross
INTEGRA					lt/min 20	1,5/4,5	6	1/2"	40	219	73	114	105	135
JUNIOR	230	9,1	2	50	lt/min 20	1,5/4,5	6	1/2"	40	219	73	114	105	135


The electrical characteristics should only to be considered in models with a Turkish bath.

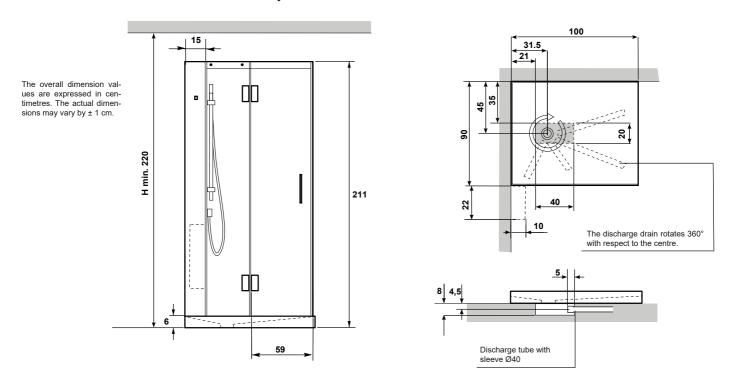

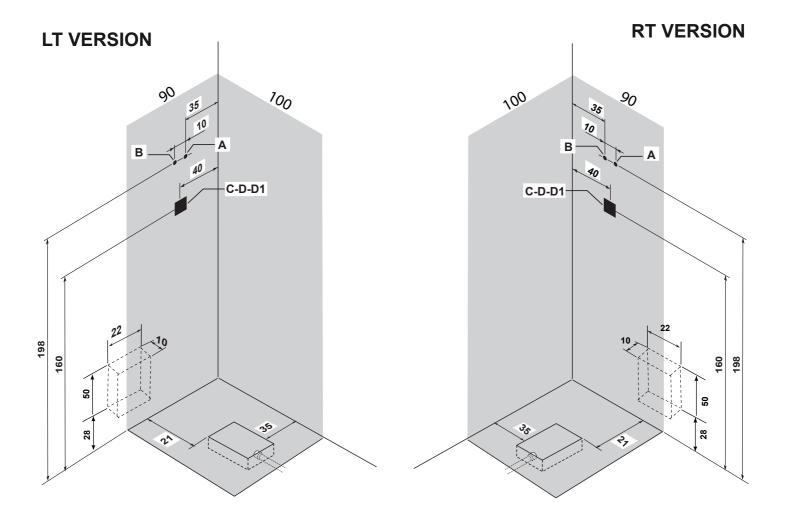

LEGEND

- A F cold water wall connection
- **B** F hot water wall connection
- C-D-D1 electrical tube outlet
- **C** Power cable outlet (min. length 2 [m])
- D Equipotential cable outlet (min. length 2 [m])
- D1 Emergency cable outlet (minimum length 2 [m])

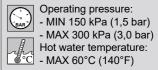

Connections C and D1 should only be considered in models with a Turkish bath. If the water pressure is higher than indicated, install pressure reducers. Provide shut-off cocks out of the dimensions of the product for hot and cold water closing.

The stall must be installed by personnel qualified in both electrical and hydraulic connections. Before making the connections, the installer must verify that the electrical system is protected by a differential switch (0.03 A) and that the earthing system complies with regulations in force in the county of use.

The stall must be connected to the electrical system in a fixed manner (with a 3-pole H05 -3x2.5 mm2 cable with 2.5 mm2 diameter) using a bipolar switch (minimum contact opening 3 mm.) suitable to the power (KW) of the product to be connected and located outside zones 0,1,2,3 and far from any possible water sprays.

The product must also be connected to the building's equipotential system using the terminal located on the external frame. It is necessary that the stall be able to be moved at any time without having to damage the walls.

WARNING: if the conditions indicated are not observed, the safety of the stall may be compromised: in this case, the product guarantee and the manufacturer's responsibility for any direct or indirect damage cause by the product shall be void. When the guarantee is voided, for the above-mentioned reason, only parts recognised as being defective will be replaced and costs related to the labour necessary for product removal will not be covered.