
T EMPO CURVO 90 x 90 h 211	Data sheet	HAFR acqua, per pi
VERSIONE SX	VERSION IN LEFT CORNER	VERSION right corner


The minimum height of the wall tiles without protrusions is equal to the height of the stall. On the walls there cannot be any greca or quarter round decorative patterns.

R 520

	Electrical characteristics			stics	Hydraulic characteristics				Overall dimensions					
SYSTEMS					consune p	ression		collegamenti		stall package dimensions			weight	
	Volt	A	Kw	Hz	water	pressure	jets	H/C water	discharge	length	width	height	net	gross
INTEGRA					lt/min 20	1,5/4,5	6	1/2″ 40		219	73 1	14 105	135	
JUNIOR	230	9,1	2	50	lt/min 20	1,5/4,5	6	1/2″ 40		219	73 1	14 105	135	


The electrical characteristics should only to be considered in models with a Turkish bath.

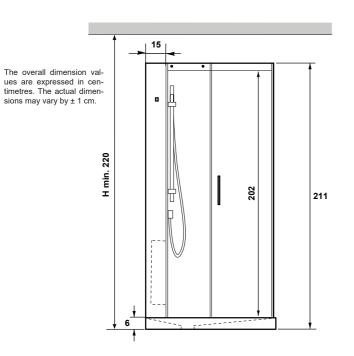


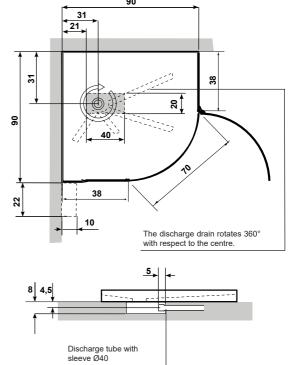

iacere


Electrical and hydraulic presetting

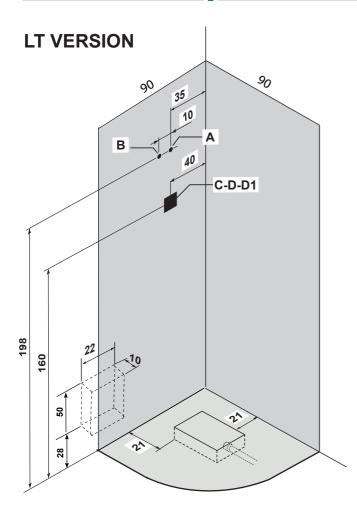

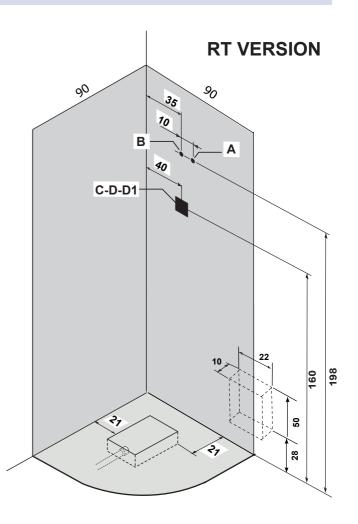

LEGEND

 - A F cold water wall connection
- **B** F hot water wall connection
- C-D-D1 electrical tube outlet
- C Power cable outlet (min. length 2 [m])
- D Equipotential cable outlet (min. length 2 [m])
- D1 Emergency cable outlet (minimum length 2 [m])



Connections C and D1 should only be considered in models with a Turkish bath. If the water pressure is higher than indicated, install pressure reducers. Provide shut-off cocks out of the dimensions of the product for hot and cold water closing.

The stall must be installed by personnel qualified in both electrical and hydraulic connections. Before making the connections, the installer must verify that the electrical system is protected by a differential switch (0.03 A) and that the earthing system complies with regulations in force in the county of use.

The stall must be connected to the electrical system in a fixed manner (with a 3-pole H05 -3x2.5 mm2 cable with 2.5 mm2 diameter) using a bipolar switch (minimum contact opening 3 mm.) suitable to the power (KW) of the product to be connected and located outside zones 0,1,2,3 and far from any possible water sprays.

The product must also be connected to the building's equipotential system using the terminal located on the external frame. It is necessary that the stall be able to be moved at any time without having to damage the walls.

WARNING: if the conditions indicated are not observed, the safety of the stall may be compromised: in this case, the product guarantee and the manufacturer's responsibility for any direct or indirect damage cause by the product shall be void. When the guarantee is voided, for the above-mentioned reason, only parts recognised as being defective will be replaced and costs related to the labour necessary for product removal will not be covered.