# BOLLA R SFIORO 200x150


The bath must be installed by a qualified electrician and plumber.

Before connecting the bath, the installer must see that the electrical system is protected by a circuit breaker (0.03) and that the earthing system complies with the laws in force in the country of installation.

The whirlpool bath must be connected to the electrical system permanently (with an H05 cable - 3x2.5 m<sup>2</sup>m threepole with a 2.5 m<sup>2</sup>m cross section) by means of a double-pole switch (minimum 3 mm opening between contacts) and suitably rated (KW) for the appliance to be connected, located away from areas 0,1,2,3 and from areas where jets of water are possible.

# echnical Data sheet



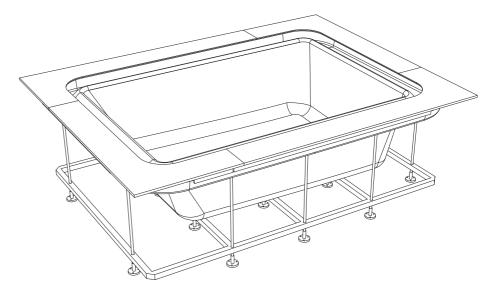

SYSTEMS	Electrical specification				Jet	Water	cont		Siz		Packing		dimension		Weight	
	Volt	A	KW	Hz	Whirl	Air	Use	max	lenght	width.	height	lenght .	width.	height	net	gross
Whirl. digitale	230	3.6 / 10.4*	0.8 / 2.3*	50	12		420	560	200	150	64	200	200	85	85	125
Airpool	230	3.2	0.7	50		24	420	560	200	150	64	200	200	85	80	114
Whirl. airpool	230	6.8 / 13.6*	1.5 / 3.0*	50	12	24	420	560	200	150	64	200	200	85	95	135
Vasca con telaio							420	560	200	150	64	200	200	85	60	104

\* With option (heater 1.5kw)

Provide for the inspection panel and snorkel.

The data are to be considered without accessories.

The overall dimensions are given in centimetres. Actual dimensions canvary by  $\pm 1\mbox{ cm}.$ 


The bath must also be connected to the building's equipotential earthing system by means of a terminal on the frame. If the bath is to be recessed in walls, the guarantee will only be valid if the walls are fitted with inspection and aeration grids of a suitable size.

It is also important that the bath can be taken out at any time without having to do anything to the walls.

WARNIN G: if all or even part of the above described conditions are not complied with the safety of the whirlpool bath cannot be guaranteed and, as such, not only is the guarantee invalidated but also the manufacturer can in no way be held liable for any direct or indirect damages caused by the bath.

In those cases where such conditions are not complied with, the guarantee will only cover the substitution of parts deemed defective and not the labour needed if the bath has to be removed.


Provide shut-off cocks out of the dimensions of the product for hot and cold water closing.

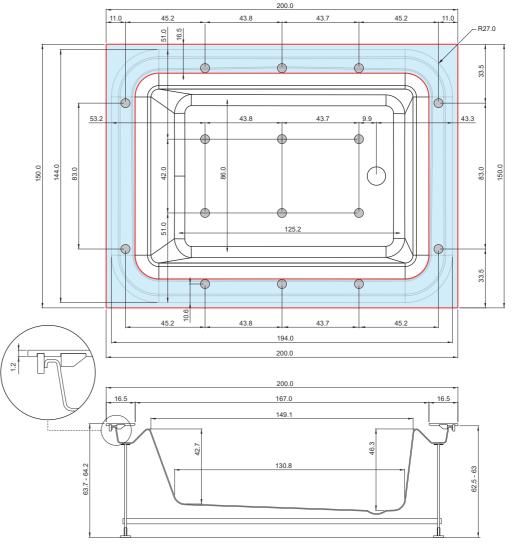


### **BOLLA R** SFIORO 200x150

LEGEND:

A - A1 - Mixed water outlet (connects to 'attack F).

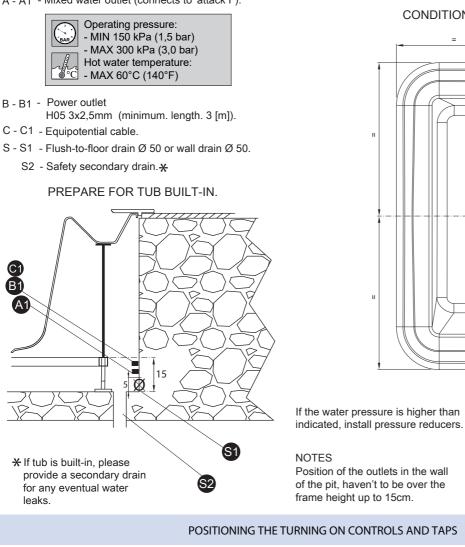


#### CONDITIONS FOR PANNELED TUB.

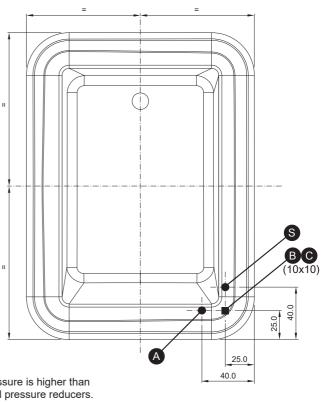

Position of the outlets in the wall of the pit, haven't to be over the

NOTES

- For tanks with frame, not predict power cord.
- In all cases, always ensure
- The cable to the potential equalization.

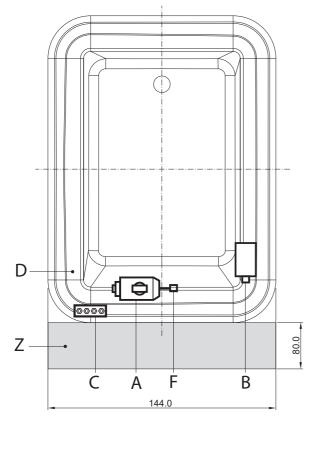

- - A = Pump Excluded Airpool bath.
  - B = Blower Excluded Whirlpool tubs-Digital.

OOL

- C = Eletronic unit.
- D = Keyboard.
- F = Water input da 1/2".
- Z = INSPECTION AREA LOCATED UNDER THE SEAT.

## BOLLA R SFIORO 200x150

