NOVA 180x80xH58


The bath must be installed by a qualified electrician and plumber.


Before connecting the bath, the installer must see that the electrical system is protected by a circuit breaker (0.03) and that the earthing system complies with the laws in force in the country of installation.

The whirlpool bath must be connected to the electrical system permanently (with an H05 cable - 3x2.5 mm threepole with a 2.5 mm² cross section) by means of a double-pole switch (minimum 3 mm opening between contacts) and suitably rated (KW) for the appliance to be connected, located away from areas 0,1,2,3 and from areas where jets of water are possible.

Technical data sheet



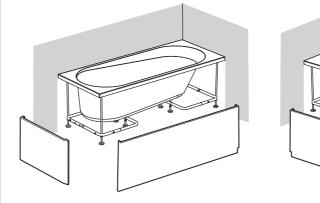

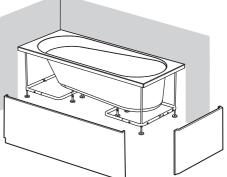

tub LEFT

The tub should be always installed with the commands Towards the outer side for technical accessibility. The sides are AVAILABLE for version Right and Left.

SISTEMI	Caratteristiche elettrich e				Bocchett e		Cont. acqua		Dimension i			Dim. imball o			Peso	
	Volt	Α	kW	Hz	Whirl	Air	utilizzo	max	lungh.	largh.	altezza	lungh.	largh.	altezza	netto	lordo
Whirlpool	230	3,6	0,83	50	6	-	175	215	180	80	58	187	87	76	50	62
Airpool	230	3,0	0.70	50	-	12	175	215	180	80	58	187	87	76	42	58
Whirlpool airpool	230	6,7	1,55	50	6	12	175	215	180	80	58	187	87	76	57	73
Vasca con telaio	-	-	-	-	-	-	175	215	180	80	58	187	87	76	37	51

tub RIGHT

The data are to be considered without panels and accessories

The overall dimensions are given in centimetres. Actual dimensions can vary by \pm 1 cm.


The bath must also be connected to the building's equipotential earthing system by means of a terminal on the frame.

If the bath is to be recessed in walls, the guarantee will only be valid if the walls are fitted with inspection and aeration grids of a suitable size. It is also important that the bath can be taken out at any time without having to do anything to the walls.


WARNING: if all or even part of the above described conditions are not complied with the safety of the whirlpool bath cannot be guaranteed and, as such, not only is the guarantee invalidated but also the manufacturer can in no way be held liable for any direct or indirect damages caused by the bath.

In those cases where such conditions are not complied with, the guarantee will only cover the substitution of parts deemed defective and not the labour needed if the bath has to be removed.

Provide shut-off cocks out of the dimensions of the product for hot and cold water closing.

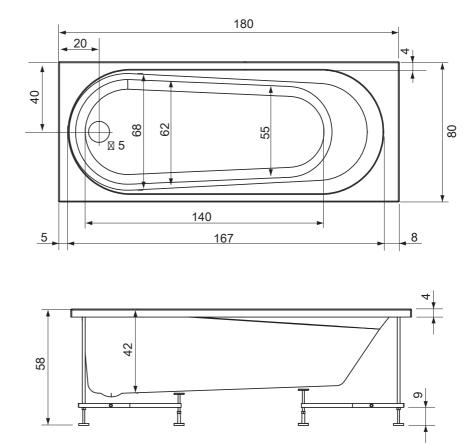


If the tub is installed flush, the wall can not fall from the outer edge more than 1 cm. Provide for the inspection panel and snorkel. In tubs Whirlpool and Whirlpool airpool the pipes are at the outer edge of the tub.

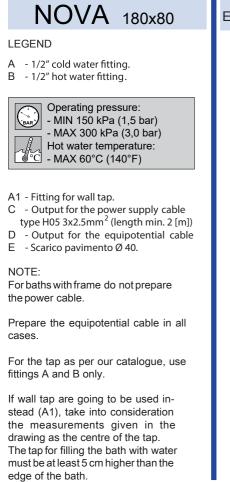


Electricity and plumbing layout

Right bath version Connections are reversed for the left version

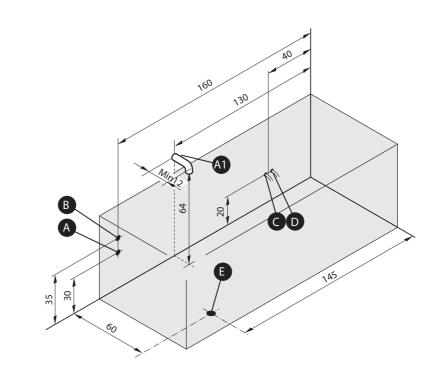


If the water pressure is higher than indicated, install pressure reducers.


POSITIONING THE TURNING ON CONTROLS AND TAPS

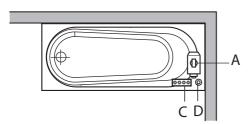

Whirlpool

 


Rubinetteria

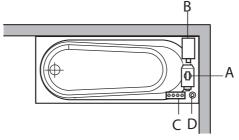

Whirlpool airpool

- A = PumpB = Blower
- C = Eletrical Control
- D = Digital Control

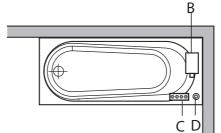

Airpool