

# BOLLA 160

Whirlp. Airpool  
Whirlp. Digitale


# technical data sheet



The bath must be installed by a qualified electrician and plumber.

Before connecting the bath, the installer must see that the electrical system is protected by a circuit breaker (0.03) and that the earthing system complies with the laws in force in the country of installation.

The whirlpool bath must be connected to the electrical system permanently (with an H05 cable - 3x2.5 mm<sup>2</sup> three-pole with a 2.5 mm<sup>2</sup> cross section) by means of a double-pole switch (minimum 3 mm opening between contacts) and suitably rated (KW) for the appliance to be connected, located away from areas 0,1,2,3 and from areas where jets of water are possible.

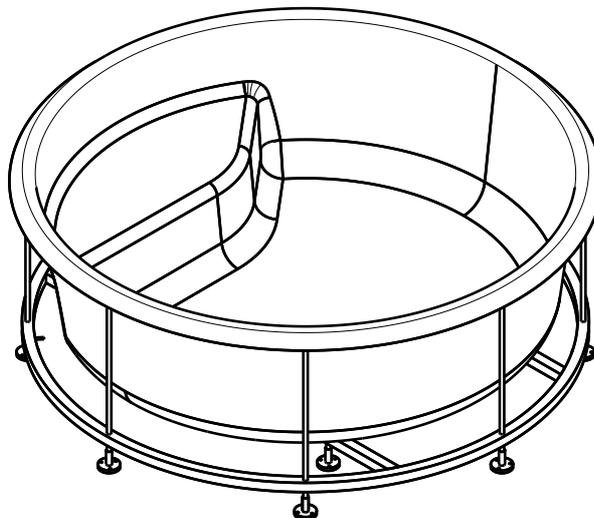

SYSTEMS	Electrical specification				Jet		Water cont		Siz	Packing		dimension		Weight		
	Volt	A	kW	Hz	Whirl	Air	use	max		diamet.	width	length	width	height	net	gros
Whirlpool - Airpool	230	6.8/10.5*	1.53/2.33*	50	12	24	420	483	160	---	61	166	166	78	70	96
Whirlpool Digitale	230	3.8/10.5*	0.83/2.33*	50	12	---	420	483	160	---	61	166	166	78	60	86


\*Optional Heater (1.5 KW)

The bath must also be connected to the building's equipotential earthing system by means of a terminal on the frame. If the bath is to be recessed in walls, the guarantee will only be valid if the walls are fitted with inspection and aeration grids of a suitable size. It is also important that the bath can be taken out at any time without having to do anything to the walls.


**WARNING:** if all or even part of the above described conditions are not complied with the safety of the whirlpool bath cannot be guaranteed and, as such, not only is the guarantee invalidated but also the manufacturer can in no way be held liable for any direct or indirect damages caused by the bath.

In those cases where such conditions are not complied with, the guarantee will only cover the substitution of parts deemed defective and not the labour needed if the bath has to be removed.

Provide shut-off cocks out of the dimensions of the product for hot and cold water closing.

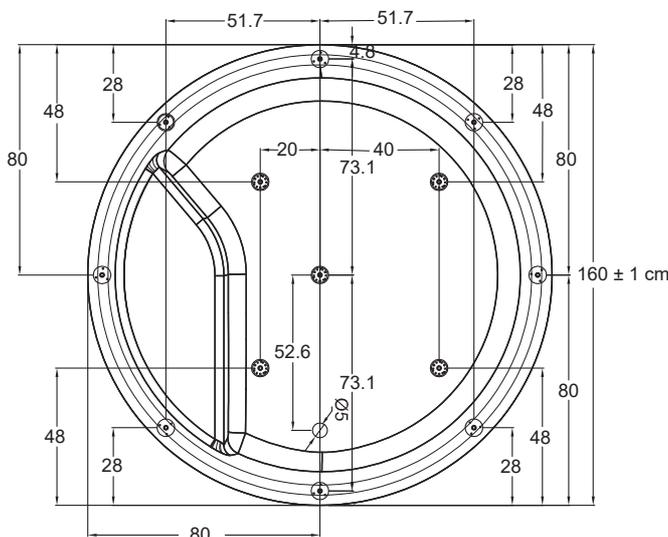

The overall dimensions are given in centimetres. Actual dimensions can vary by ± 1 cm.

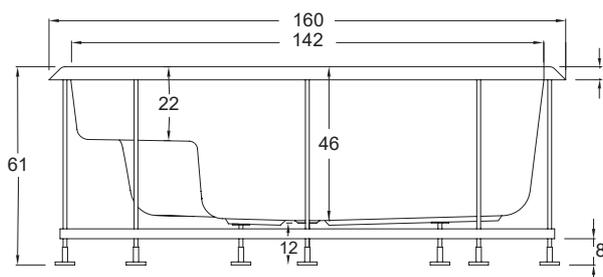

If the bath is recessed the masonry cannot reenter more than the masonry must fall back to the outer edge of 2 cm. An inspection panel and air intake must be installed.

### LEGEN D

- A - Inspection area .
- B - Output for the power supply cable type H05 3x2.5mm<sup>2</sup> length M.2.


	Operating pressure:
	- MIN 150 kPa (1,5 bar)
	- MAX 300 kPa (3,0 bar)
	Hot water temperature:
	- MAX 60°C (140°F)

- B1 - Output for the equipotential cable
- C - Draining area
- D - Ø 50 floor drain.


NOTE :  
Do not prepare the power cable for baths with frame.

Prepare the equipotential cable in all cases .

If the water pressure is higher than indicated, install pressure reducers.

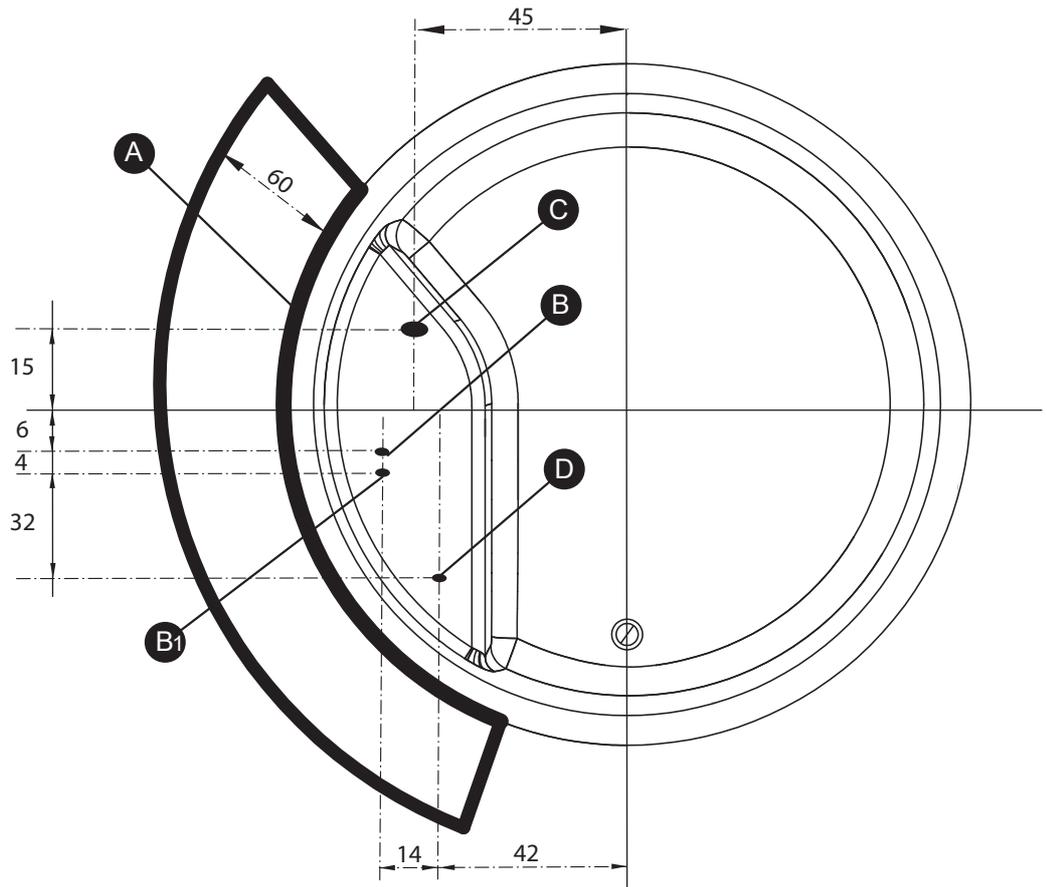

### POSITIONING THE TURNING ON CONTROLS AND TAPS WHIRPOOL DIGITALE - WHIRPOOL AIRPOOL

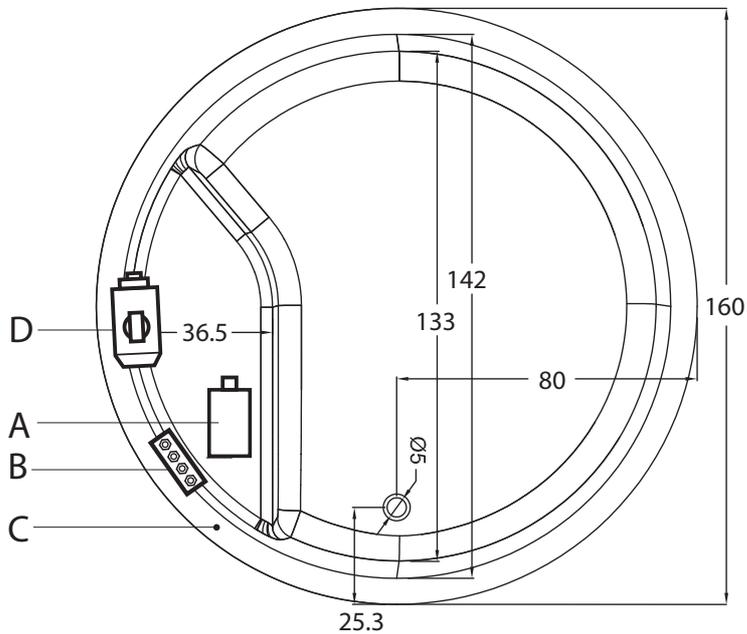

- A = Blower
- B = Eletronic unit
- C = Keyboard
- D = Pump

A - B - C - D Position can be different according with accessories presence (radio - chromoterapy - heater).

